HOME
DECORATORS
COLLECTION

BF-25066 HUTCH WITH REMOVABLE CLOTHING ROD & ADJUSTABLE SHELVES

INV#13634

ASSEMBLY INSTRUCTIONS

Made In China

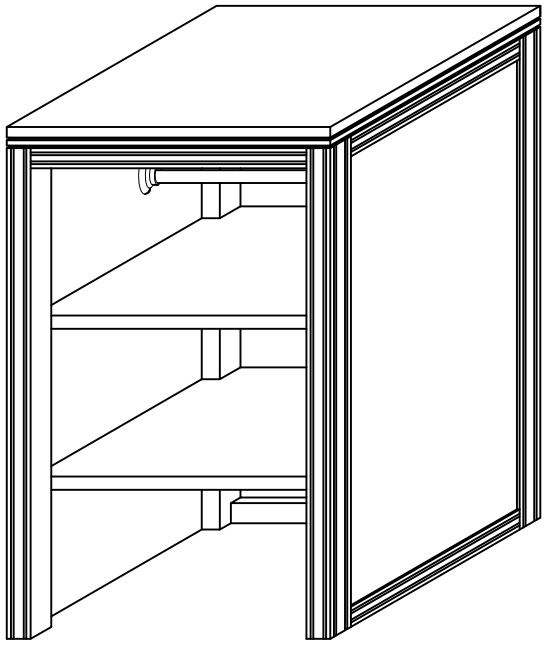

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have came loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

PARTS LIST

A  TOP PANEL-1PC	B  LEFT SIDE PANEL-1PC	C  RIGHT SIDE PANEL-1PC
D  SHELVES-2PCS	E UP ADORNING PANEL-1PC	F DOWN ADORNING PANEL-1PC
G 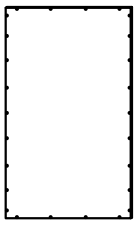 BACK PANEL-1PC	H 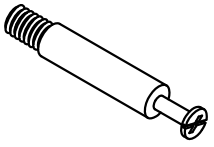 CAM-BOLTS-6PCS	I 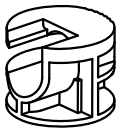 CAM-LOCKS-6PCS
J CAM-TOOL-1PC	K 7mm× 5/8"  SCREWS-34PCS	L  CIRCINAL WOOD -1PC

M SHELF SUPPORTS-8PCS	N 6mm× 3/4" SCREWS-4PCS	O 8mm× 1-1/2"  SCREWS-4PCS
P 7mm× 7/8" SCREWS-4PCS	Q 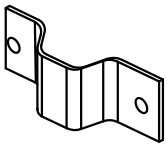 HOOKS-4PCS	R  PLATES-2PCS
S GECKOS-4PCS	T PLASTIC BELTS-2PCS	U CAM-LOCKS CAPS-4PCS

NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

NOTE: • UPON OPENING, THOROUGHLY CLEAN ALL WOOD SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY, PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

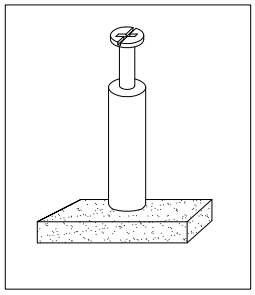

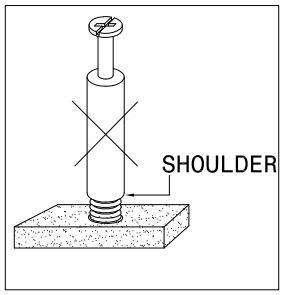

NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

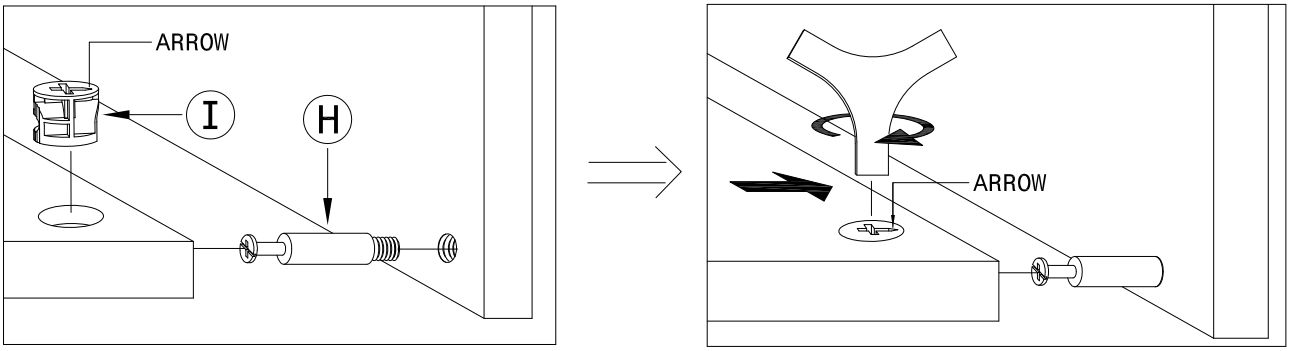

NOTE: • THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

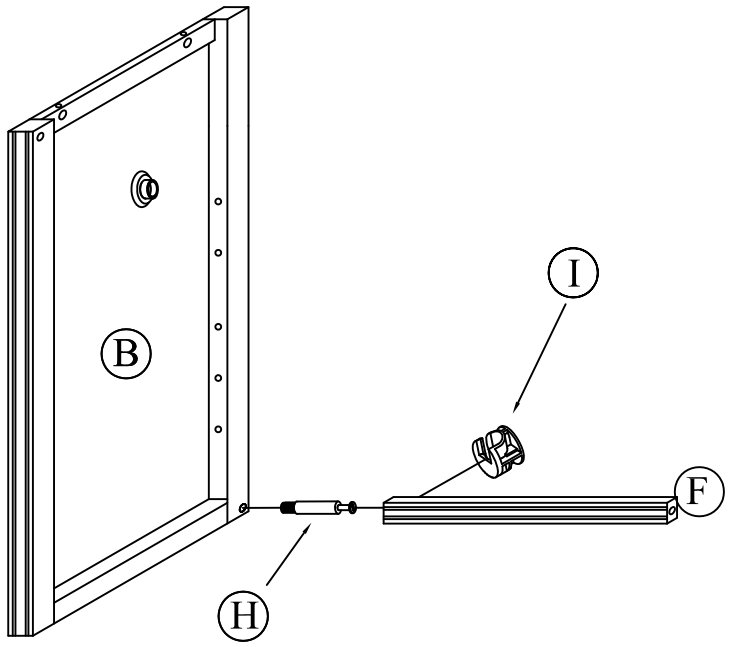

1). ASSEMBLE THE LEFT SIDE PANEL(B).

- ROTATE 1 CAM-BOLT(H) INTO THE HOLE IN THE LEFT SIDE PANEL(B).
- PLACE CAM-BOLT(H) INTO THE HOLE IN THE PANEL(F) AND ATTACH USING 1 CAM-LOCK(I).

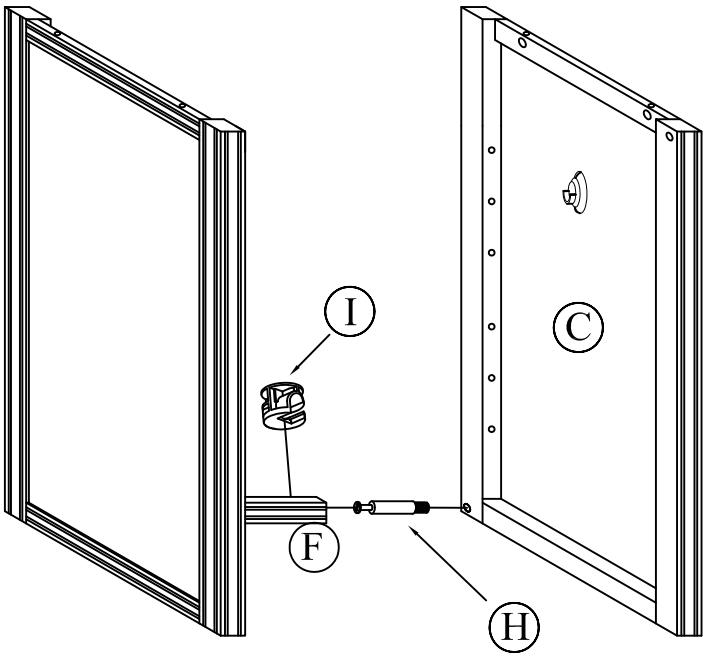

2). ASSEMBLE THE RIGHT SIDE PANEL(C).

- ROTATE 1 CAM-BOLT(H) INTO THE HOLES IN THE RIGHT SIDE PANEL(C).
- PLACE CAM-BOLT(H) INTO THE HOLE IN THE PANEL(F) AND ATTACH USING 1 CAM-LOCK(I).

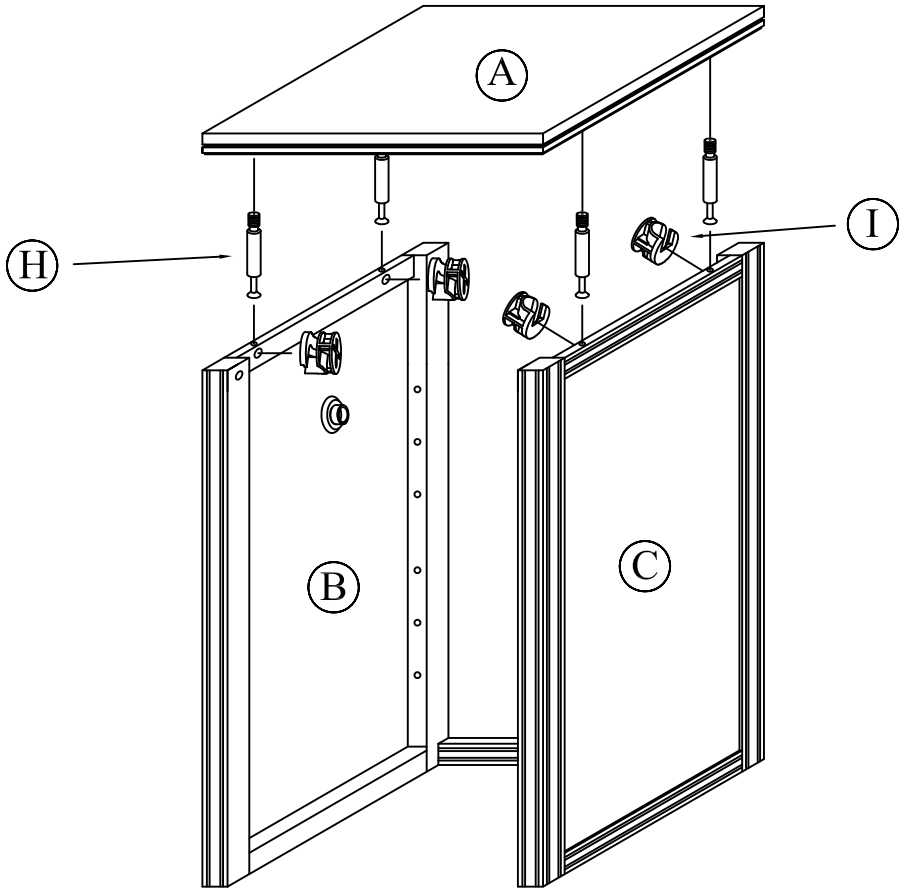

3). ASSEMBLE THE TOP PANEL(A).

- ROTATE 4 CAM-BOLTS(H) INTO THE HOLES IN THE TOP PANEL(A).
- PLACE CAM-BOLTS(H) INTO THE HOLES IN THE PANEL(B/C) AND ATTACH USING 4 CAM-LOCKS(I).

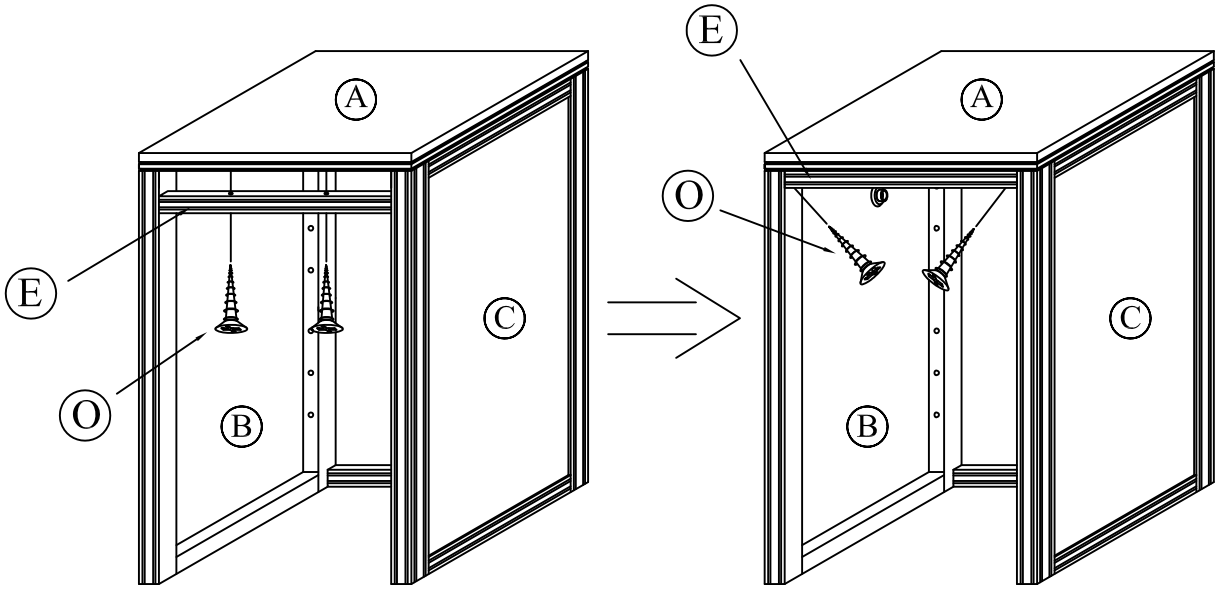

4). ASSEMBLE THE UP ADORNING PANEL(E).

- ATTACH THE UP ADORNING PANEL(E) TO PANEL(A/B/C) USING 4 SCREWS(O).

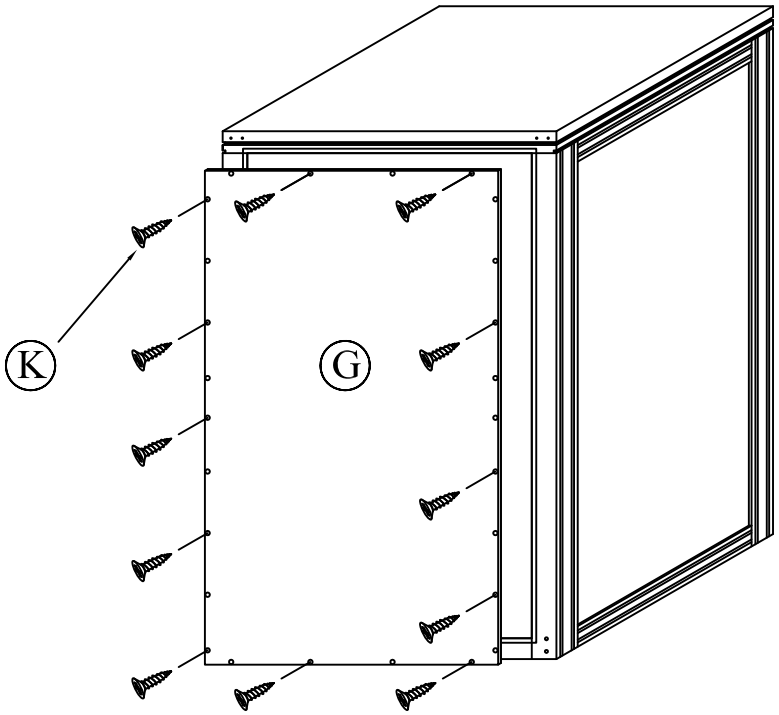

5). ASSEMBLE THE BACK PANEL(G).

- ATTACH THE BACK PANEL(G) USING 26 SCREWS(K).

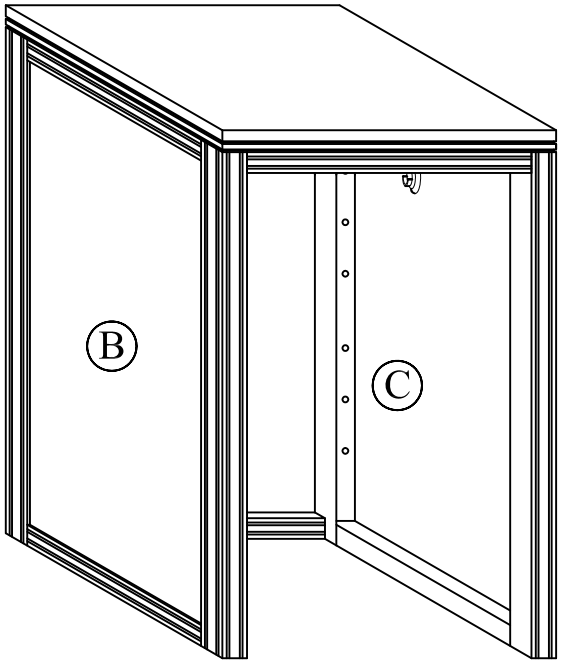

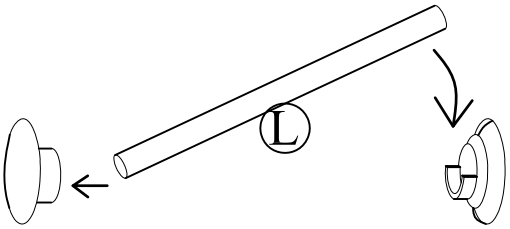

6). ASSEMBLE CIRCINAL WOOD(L).

- INSERT THE CIRCINAL WOOD(L) INTO THE HOLES IN PANEL(B/C).
  WHEN INSTALLED, PLS PUT THE CIRCINAL WOOD(L) IN IT FROM THE LEFT SIDE PANEL(B), THEN PUT IT INTO THE RIGHT SIDE PANEL(C). WHEN DISMANTLED, PLS REMOVE THE RIGHT SIDE PANEL(C) FIRST.

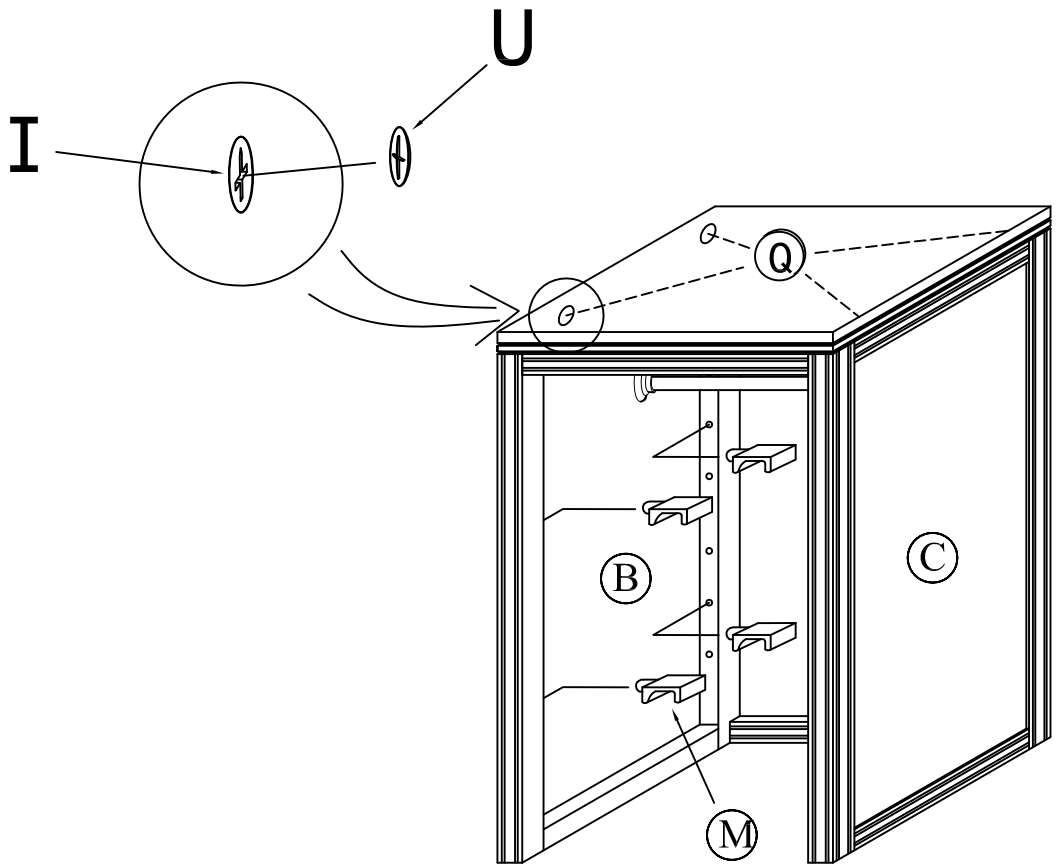

7). ASSEMBLE THE SHELF SUPPORTS(M) AND CAM-LOCK CAPS(U).

- ATTACH 4 CAM-LOCKS(I) USING 4 CAM-LOCK CAPS(U).
- INSERT 8 SHELF SUPPORTS(M) INTO THE HOLES IN THE PANEL(B/C).

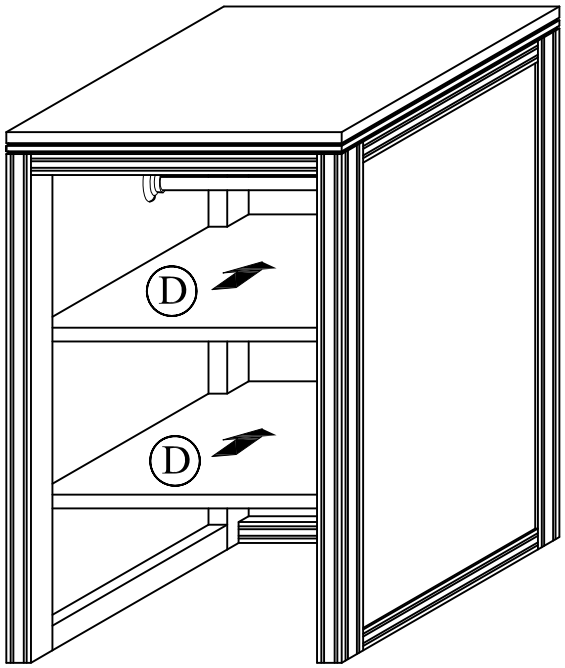

8). ASSEMBLE THE SHELVES(D).

- PLACE THE SHELVES(D) ONTO THE SHELF SUPPORTS(M).

Warning

The anti-tip hardware must be used as part of assembly!

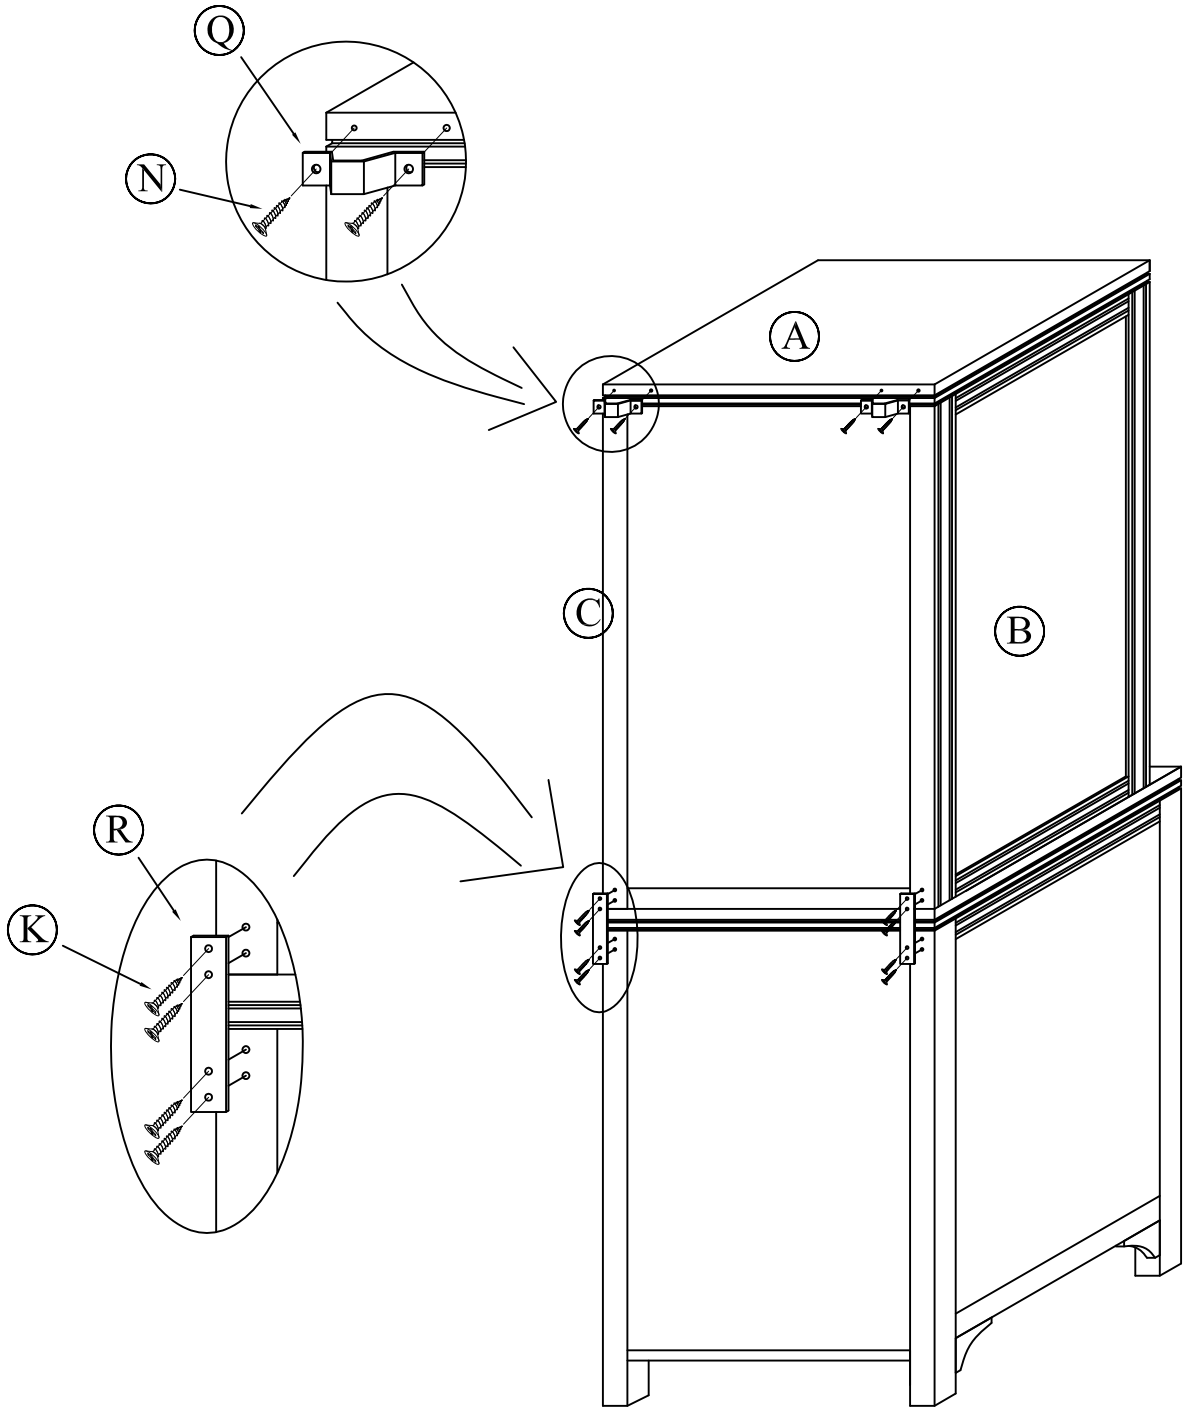

9). ASSEMBLE THE HOOKS(Q) AND PLATE(R).

- ATTACH 2 HOOKS(Q) USING 4 SCREWS(N) IN THE PREDRILLED HOLES OF REAR TOP PANEL(A).
- ATTACH 2 PLATES(R) TO SIDE PANEL(B/C) USING 8 SCREWS(K).

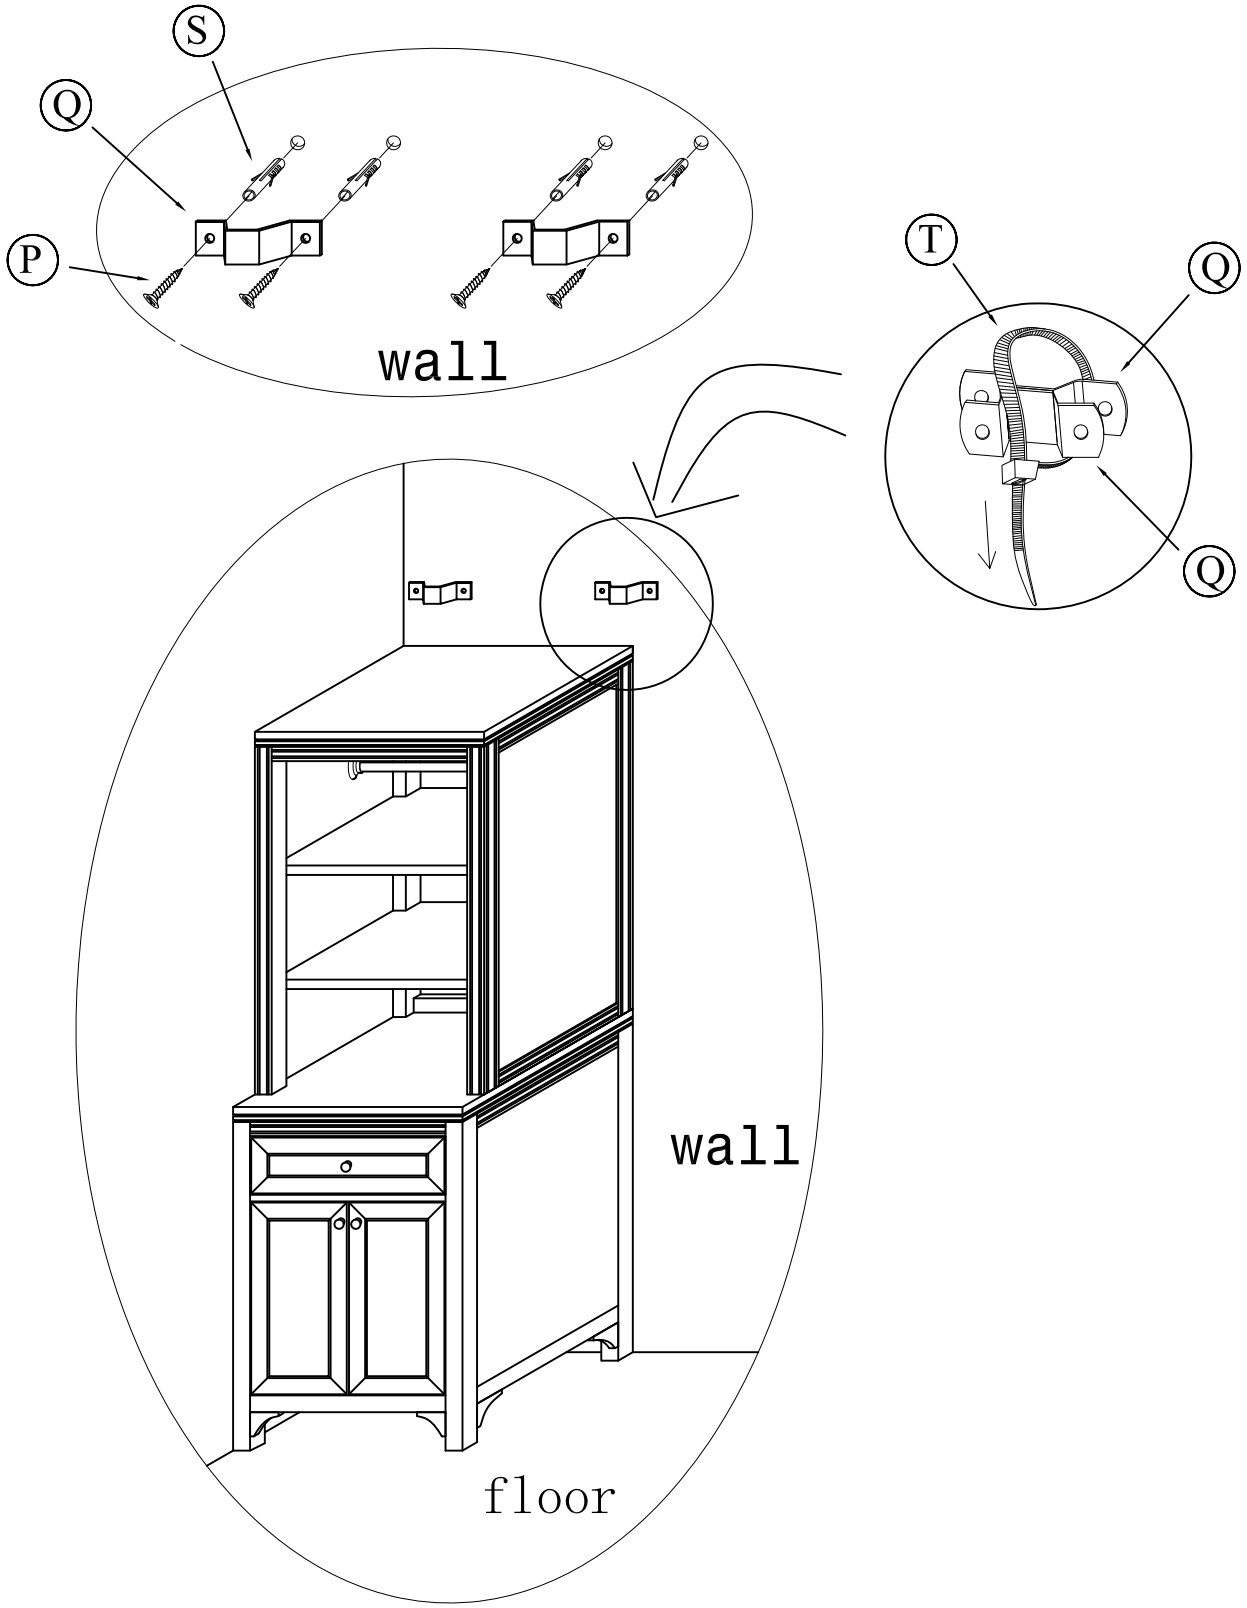

10). ASSEMBLE THE ANTI-TIP HARDWARE.

- DRILL 4 HOLES INTO THE WALL, PLEASE REFER TO THE REAR TOP PANEL'S HOLES DISTANCE AND HEIGHT.
- PUT 4 GECKOS(S) INTO HOLES IN THE WALL, AND ROTATE 4 SCREWS(P) INTO THE GECKOS(S).
- CONNECT THE TWO HOOKS(Q) WITH A PLASTIC BELT(T).